

USER PRECAUTIONS

Please read all instructions in this manual and on the Sparkle Ultrasonic Cleaner

- ⚠ Please make sure no soft gemstones are attached to the metal. DO NOT clean pearls and soft stones like emeralds with ultrasonic cleaner (hardness should be higher than Moh 5).
- ⚠ Keep away from pacemakers.
- ⚠ Make sure the container is filled with water during operation.
- ⚠ Do not fill the container with flammable liquid. Do not place the appliance near wet areas.
- ⚠ Do not fill the water directly from the tap and do not clean the appliance with running tap water. Fill the container with water using a cup up to the MAX level.
- ⚠ Do not dismantle the appliance.
- ⚠ Please use the adapter provided only. Do not unplug the appliance with wet hands. Unplug and remove the adapter when not in use.
- ⚠ If the red light flashes when the appliance heats up, unplug it and try again after it has cooled. This may take up to 3 minutes.

JEWELLERY CLEANING PRECAUTIONS

- Do not clean jewellery with emerald, coral, antique silver, turtle shell, ivory, pearl, onyx, opal, tanzanite, lapis lazuli & turquoise.
- Scratched and cracked gemstones cleaned with this appliance may increase scratches and cracks.
- The ultrasonic cleaner cannot remove permanent black spots or the discoloration and rusting of metals and precious metals.
- Do not clean jewellery with poor finishing or coating, the ultrasonic cleaner will damage it.
- Watches are not safe to clean, the ultrasonic vibrations may cause the watch body to malfunction if it is submerged into water during cleaning.
- The jewellery that can be cleaned with this: amethyst, sapphire, soviet diamond, diamond, gold, garnet, agate, peridot, platinum, ruby, topaz, silver, crystal. Stones that have only few or small inclusions and have not been treated with heat or chemicals, or don't have any coating are safe to clean.

Suitable	Not Recommended
<ul style="list-style-type: none">• Metal or Plastic• Glasses/Frames• Jewellery• Dentures• Shaving blades• Metal strap or bracelets	<ul style="list-style-type: none">• Soft gemstones• Jewellery with cracks or scratches• Watches• Glasses frames made of ivory, shells, natural stones• Lacquer

SPARKLE ULTRASONIC CLEANER

If you have questions, please contact us at tidyup@hypercasa.com

Disclaimer: HyperCasa will not be held responsible for any loss or damage from this device. Use the Ultrasonic Cleaner at your own discretion.

SPARKLE ULTRASONIC CLEANER

INSTRUCTIONS



45K
HZ

100%
GREEN



TIMER
5 MINS

DC
12V
SAFETY

SUS304

IP65

290G
LIGHT

SETTING UP

STEP 1 Open the cover and fill the container with water. Do not exceed the MAX level.



STEP 2 Put the items to be cleaned into the container and add 2 sprays of Tidy Up! cleaning solution.



STEP 3 Connect the Sparkle Ultrasonic Cleaner to the power supply. The power button will turn green.

STEP 4 Press the Power button to turn on the magic. Do not get scared of the noise. The cleaner will automatically switch off after 5 minutes. To switch off manually press the Power button.



STEP 5 Remove the items from the container and wipe with a soft cloth.



NOTE May not be able to remove dirt or stains completely during the first use. It is recommended to repeat the above process for best results.

PRODUCT SPECIFICATIONS

Dimensions: 125×99×45 mm	Container dimensions: 93×83×33mm
Power supply: 12V	Container volume: 250ml
Power consumption: 15W	Weight: 290g
Ultrasonic frequency: 15W	

HOW IT WORKS

Sparkle Ultrasonic cleaner use sound waves to break down the dirt particles accumulated on the surface of your jewellery. (Refer *Jewellery Cleaning Precautions section page 6*)

MAINTENANCE

Cleaning the container

- Fill the container with HALF the water level, use a soft cloth or sponge to wipe the container a couple of times
- Wipe it dry after cleaning

Cleaning the unit

- Use a wet soft cloth to clean the exterior surface
- Make sure the water does not get into the electronic parts
- Wipe the unit dry after cleaning
- Do not use any solvent to clean